

# PALICO

## PALICO Aroma Coffee Grinder

Instruction manual



FCG1317



### **Approved by European Coffee Brewing Centre**

To optimise the extraction of the coffee when brewing with a filter, put the coffee grinder on a setting that will produce a percolation time of 4-6 minutes in an approved coffee percolator

*Congratulations on your PALICO Aroma coffee grinder. Grinding fresh coffee beans means you can have a great cup of coffee whenever you want. PALICO Aroma coffee grinder is a high quality appliance with several grinding levels to give you great coffee time and time again.*

**For your own safety: please read this user manual carefully before using the unit.**


- This product meets legislative requirements in regard to technical certification and safety regulations for electrical devices.
- The power from the main supply must correspond to the product label.
- When disconnecting the unit from the power supply, your grip should be on the plug and not the power cord. Keep it well away from hot and damp places.
- Do not place the product on or close to hot objects or surfaces.
- Keep the power cord away from hot objects.

- Do not insert or pull out the plug with wet hands.
- If there is any damage to the appliance or if it does not work, only authorised personnel may repair the appliance.
- Children shall not play with the appliance.
- When you cleaned appliances after use, the appliance must not be immersed in water or other liquid.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Always disconnect the appliance from

the supply if it is left unattended and before assembling, disassembling or cleaning.

- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards.
- Regularly empty the appliance for coffee bean residue.

## *Design*

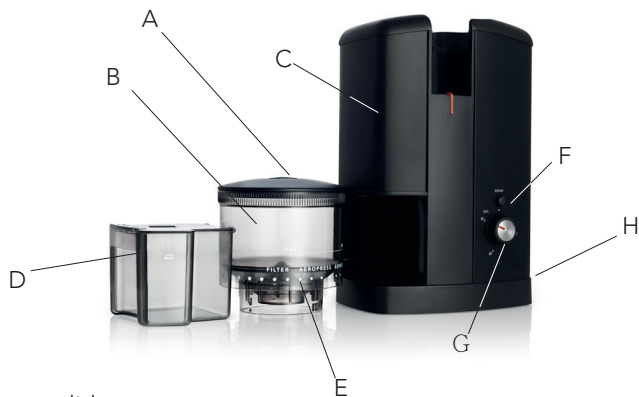

- A Bean cup lid
- B Bean cup
- C Main body
- D Cup for freshly ground coffee
- E Grinding level indicator
- F Grinder (start button)
- G Timer
- H Power switch

Please read these instructions carefully and keep them for future reference.

The main body of this product is made from black plastic material with a stainless steel surface. The accompanying bean cup and freshly ground coffee cup are made from transparent plastic material with UV filter. ***This product is intended for home use.***

### ***Functions***

- This coffee grinder uses a fine-toothed grinder, which guarantees fast feeding and grinding of beans and an excellent end product.
- The bean cup features variable adjustment to the grinding level. ***The appliance will not work if the freshly ground coffee cup is not inserted correctly.***
- Timer displaying 0~30 seconds controls the amount of coffee: one, two or more cups, depending on how much you want.
- You can set the desired grinding level via the variable bean cup.
- The power cord is stored under the main body of the unit.
- This product features safety protection to prevent the motor from becoming overloaded.

### *Grinding level and amount\**

Steap (Pos.18)	120 g	30 sec
French press (Pos.16)	83 g	20 sec
Filter (Pos.10)	80 g	30 sec
Aeropress (Pos.5)	23 g	10 sec
Espresso (Pos.1)	16 g	10 sec

\* Using different types of beans and brewing levels will affect the result.

### *Use*

The product is simple and safe to use. Please do a test-run before using:

- Place the grinding disc on the grinding head inside the main body. Insert the two latches so that they lie flat in the grooves.
- Carefully insert the empty bean cup in the appropriate position (turn to the right).
- Fill the bean cup with the desired amount of coffee beans and close the lid (about 250 g when completely full).
- Insert the cup for freshly ground coffee in the appropriate position on the main body.



- Connect the plug to a socket with the appropriate voltage.
- Turn the timer to the desired time (adjust the grinding time to obtain the desired amount of coffee).
- Turn on the power switch and press Grind (start button) to begin grinding coffee.

***Warning:***

- Never put coffee beans in the bean cup before it is properly inserted.
- Adjust the grinding level before adding the coffee beans.
- Never remove the bean cup before the grinder has finished operating.
- After grinding: turn the bean cup left to the "OFF" position before removing it and the grinding disc for cleaning. Reinsert the parts after cleaning.

***Maintenance and cleaning***

- This product should be used and stored by adults.
- This product should be kept away from damp places. Do not clean it in washing-up liquid or a dishwasher.
- Do not immerse it in water.
- Do not clean or perform maintenance on the unit while the plug is connected to the mains supply.

- Clean the casing, the lid of the coffee bean cup, the coffee-bean cup and coffee grinder disc with a dry cloth. Never use a wet or heavily chemical cleaning agent.
- Store the unit in a dry place out of the reach of children, and avoid direct sunlight.
- If the appliance breaks down or is dropped or damaged, stop using it immediately.
- Do not open the product, as this will invalidate the purchase-warranty.

### *Troubleshooting*

If the appliance stops working, you can investigate the cause as follows. If the problem persists, please contact your dealer or an authorised service workshop.

<i>Problems</i>	<i>Possible causes</i>	<i>Solution</i>
Coffee grinder does not operate when the start switch is on.	The plug is not plugged in properly.	Push the plug in properly.
	The mains supply voltage does not correspond to the standard for input supply.	Check that the mains supply is 220 - 240 V.
	The bean cup is not inserted correctly and the grinding level is not set; points to "OFF".	Reinsert the bean cup and set the grinding level by turning to the right.
	Cup for freshly ground coffee is not inserted correctly.	Insert the cup for freshly ground coffee in the appropriate position.
	The grinding time has not been set; timer points to "0".	Rotate the timer button to set the grinding time.

<i>Problems</i>	<i>Possible causes</i>	<i>Solution</i>
	The motor stops due to overload	Contact your dealer or a technician for repair or replacement of the appliance
High-pitch sound, beans not fed into appliance; does not produce ground coffee	The grinder is stuck	Switch off the machine and take out the coffee beans. Check to see whether any hard matter has been mixed in with the coffee beans, and check for damaged components